



# ULTIMATE TAILGATE SEAL with TAPER SEAL®


*Automotive Grade EPDM Rubber*

*Easy to Install:*

↳ *Cut, Peel & Stick*

*Keeps out Dust, Fumes and Water*

*Designed for all  
Truck Makes and Models*

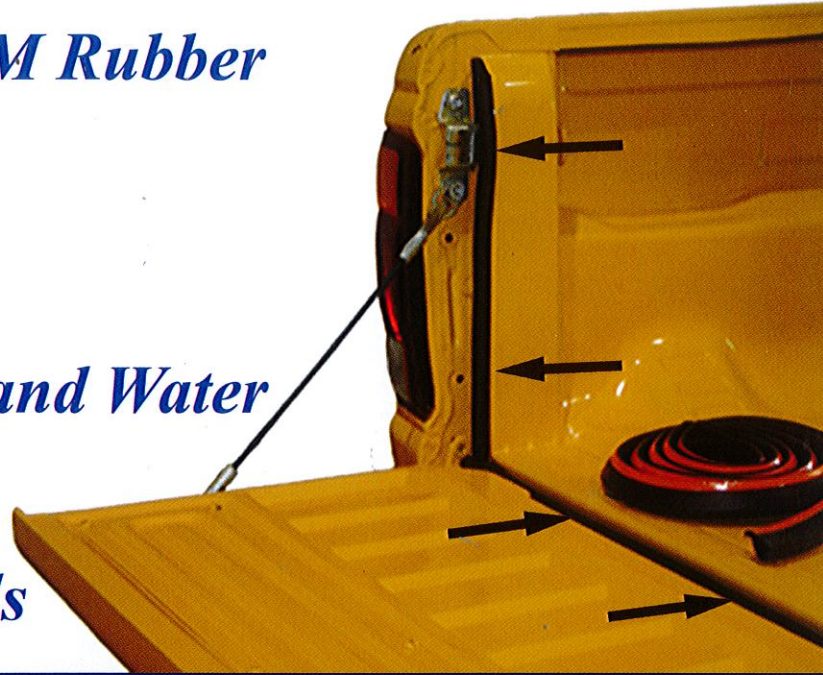

**USE ON TRUCKS WITH CAPS  
OR TONNEAU COVERS**




[extrudedolutions.com](http://extrudedolutions.com)

UTGS10



[facebook.com/extrudedolutions](https://facebook.com/extrudedolutions)

*Taper Seal is a registered trademark Extruded Solutions, Inc., Carol Stream, IL*

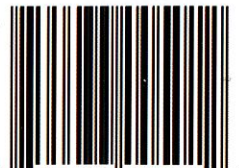

8 55433 00501 2

# Ultimate Tailgate Seal (UTGS) with Taper Seal®

**ITEMS REQUIRED: Scissors, clean rag and soap solution.** For best results, apply at a temperature above 55° (F).

## STEP 1



Clean area thoroughly with soap and water solution and wipe completely dry. Use alcohol pad to prep the application area and let dry. Wait until after **STEP 6** to apply **very firm pressure** to secure adhesive bond. If necessary, UTGS can be removed and repositioned prior to **STEP 6**.

## STEP 2

To evaluate the best positioning for your truck cut a 2" piece and position **UTGS** so that the bulb compresses when the tailgate is closed. When attaching bulb side up to the horizontal area of the tailgate gap and the bulb rolls downwards so that you can see the adhesive, then seal has compressed too much. This occurs mostly with spray on bed liners. Simply invert seal so that bulb side is down. On Chevy and GMC trucks you will be aligning the top of seal with the lower ridge of truck bed floor. For the side walls see **FIG 4A** and **4B** to determine the best positioning for your truck.

## STEP 3

Start at either side of the tailgate gap and begin attaching **UTGS** making sure that seal is flush with the truck bed floor edge or just below should truck bed floor extend over the tailgate gap. Peel back liner and adhere in sections, applying only **moderate pressure** to adhesive. When flush with other side cut to fit with scissors.

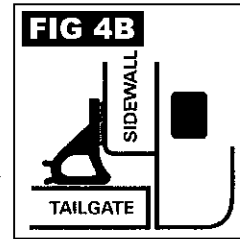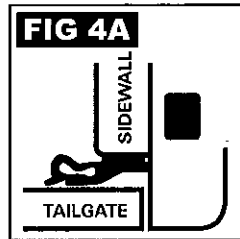

## STEP 4

Begin attaching **UTGS** to sidewall (**FIG 4A**), from bottom to top, making sure that adhesive is positioned near the corner edge of the rear sidewall. Peel back liner and apply only **moderate pressure** to adhesive. You may need to make cuts in the flat section of **UTGS** in order to follow any curves or to fit around any rubber stops. When flush with top cut to fit with scissors. **FIG 4A** is the most common attachment method. Use attachment method **FIG 4B** should **4A** not seal correctly. Position adhesive near the corner edge of sidewall. When flush with top cut to fit with scissors.

## STEP 5

Close the tailgate. If you see light between the seal and the tailgate, you can make adjustments by removing the seal and repositioning. If there is still a gap at the top of sidewalls cut pieces of **UTGS**, as needed, and attach to top of sidewall and/or tailgate. Do not attach **UTGS** directly onto **UTGS**.

## STEP 6

After **UTGS** is in place, apply **very firm pressure** to secure the adhesive bond.



The following instructions are valid for all makes of pickup trucks both foreign and domestic  
Due to the variety of truck designs the application of the **UTGS** may vary slightly.  
**Taper Seal®** is a registered trademark of Extruded Solutions, Inc.